

## NOTICE D'UTILISATION

**Fonctions**

Pile : 1.5V (LR44)x1

Prévisions météorologiques, heure, phases lunaires, température, humidité, format 12 ou 24 heures

Affichage de la date : mois, jour, jour de la semaine

Date programmée de 2003 à 2052, ajustement de la semaine automatique

Horloge avec sonnerie et alarme

Alarme avec fonction rappel sonnerie (4 fois)

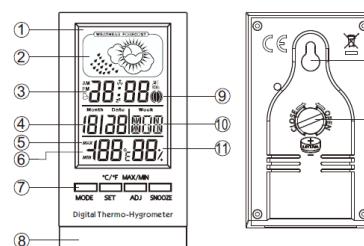
Plage de température : -50+70°C ou -58+158°F

Plage de l'hygromètre : 20 à 90 % RH

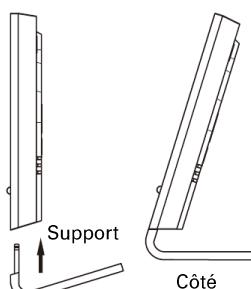
Affichage : 1°C et 1%

Précision : +/-1°C et +/-5%

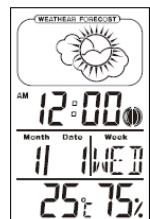
Enregistrement des températures min et max et humidité min et max

**Thermomètre**

1. Ecran
2. Prévisions météorologiques
3. Heure
4. Date
5. Max et min
6. Température
7. Boutons
8. Support
9. Phases lunaires
10. Jour de la semaine
11. Humidité
12. Trou pour accrocher le thermomètre
13. Couvercle pile



 
**Fonction des boutons :**  
 MODE : pour changer le mode heure, l'alarme ou le calendrier  
 SET, °C/F : programmation heure, alarme, calendrier  
 ADJ MAX/MIN : ajustement heure, alarme, calendrier. Enregistrement des données maximales et minimales  
 SNOOZE : 4 répétitions

**Les fonctions****Heures**

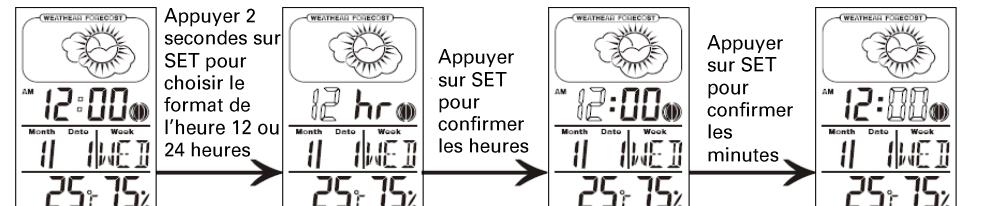
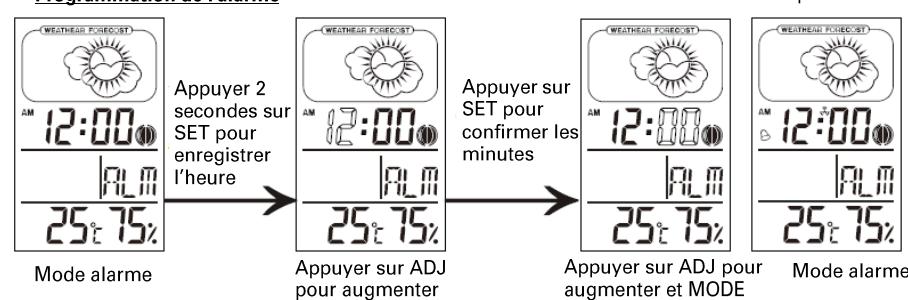
Appuyer sur MODE dans l'alarme.  
N'appuyer sur aucune touche pendant 5 minutes.  
Retourner en mode heure

**Alarme**

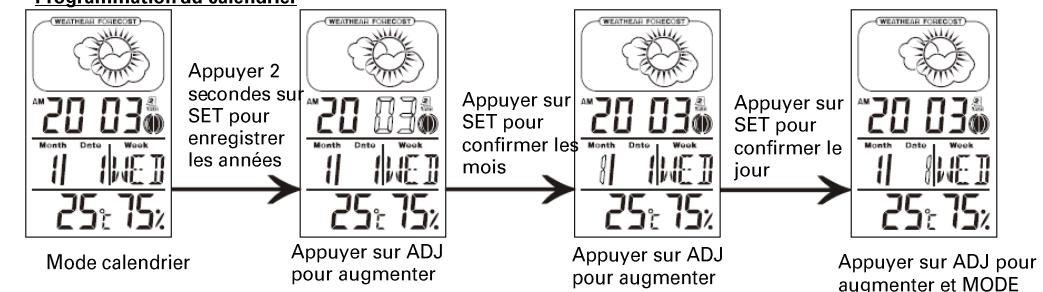
Appuyer sur MODE dans le calendrier.  
N'appuyer sur aucune touche pendant 5 minutes.  
Retourner en mode heure

**Calendrier**

Après l'insertion de la pile, l'écran affiche l'heure

**Programmation de l'heure****Programmation de l'alarme**

Sonnerie de l'alarme : appuyer sur ADJ pour mettre en marche ou éteindre la sonnerie de l'alarme.  
Lorsque les icônes s'affichent la fonction est en marche. Appuyer sur MODE pour valider

**Programmation du calendrier****Enregistrement des minima et maxima et remise à zéro**

En mode heure, appuyer sur ADJ, l'écran affiche l'icône MAX ce qui veut dire que les valeurs maxi de la température et de l'hygrométrie s'affichent

Appuyer sur ADJ, l'écran affiche l'icône MIN, ce qui veut dire que les valeurs mini s'affichent

Appuyer sur ADJ pour revenir au mode heure

Lorsque l'icône MAX et MIN s'affiche, appuyer 2 secondes sur ADJ pour réinitialiser la mémoire

**Répétitions**

Lorsque l'alarme sonne, appuyer sur SNOOZE pour mettre l'alarme en répétition

## USER MANUAL

**Functions**

Battery 1.5V (LR44) x 1 pc

Weather forecast /clock/moon face/ temperature/ humidity/ selectable for 12 or 24 hours

Date display (month/date/week)

Year range: 2003-2052, auto adjust week

Clock with chime and alarm function

Alarm with snooze function (repeat 4 times)

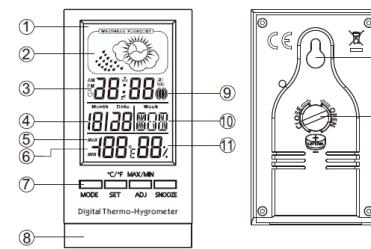
Temperature range: -50+70°C or -58+158°F

Humidity range: 20-90% RH

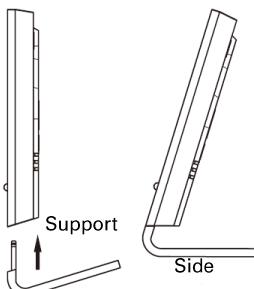
Display: 1°C, 1%

Accuracy: +/-1°C, +/-5%

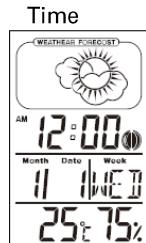
Max/Min temperature and humidity records

**Thermometer**

1. LCD
2. Weather forecast
3. Time
4. Date
5. Max and min
6. Temperature
7. Buttons
8. Support
9. Moon phase
10. Week
11. Humidity
12. Hanger
13. Battery cover

**Button functions:**

MODE: to switch time/alarm/calendar mode  
SET/C/F: time/alarm/calendar setting, °C/F switch  
ADJ, MAX/MIN: time/alarm/calendar adjust, max and min record and clear  
SNOOZE: snooze repeat 4 times

**Use**

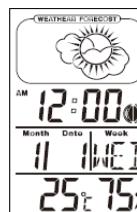
Press MODE into alarm mode.  
Within 5 minutes do not press any key, return to time mode



Press MODE into calendar mode.  
Within 5 minutes do not press any key, return to time mode



After inserting the battery,  
the time mode will  
automatically be  
displayed

**Time set**

In time mode hold  
SET button 2  
seconds to set 12/24  
hours

Time mode

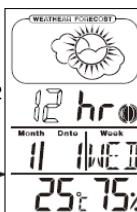
Press ADJ to select

Press SET button to  
confirm and into hour set

Press ADJ to increase

Press SET button to  
confirm and into minute set

Press ADJ to increase

Press ADJ to increase and  
MODE to finish

Press ADJ to select

Press SET button to  
confirm and into hour set

Press ADJ to increase

Press SET button to  
confirm and into minute set

Press ADJ to increase

Press ADJ to increase and  
MODE to finish

Press SET button to  
confirm and into minute set

Press ADJ to increase

Press SET button to  
confirm and into hour set

Press ADJ to increase

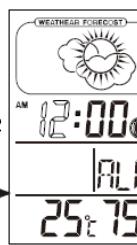
Press ADJ to increase and  
MODE to finishPress ADJ to increase and  
MODE to finish**Programmation de l'alarme**

In alarm mode hold  
SET button 2  
seconds to set hours

Alarm mode

Press SET button to  
confirm and into minute set

Press ADJ to increase

Press ADJ to increase and  
MODE to finish

Press ADJ to increase

Press SET button to  
confirm and into minute setPress ADJ to increase and  
MODE to finish

Alarm mode

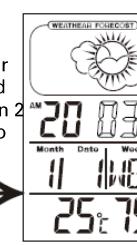
**Calendar set**

In calendar mode hold  
SET button 2  
seconds to set years

Calendar mode

Press SET button to  
confirm and into month set

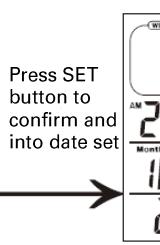
Press ADJ to increase

Press SET button to  
confirm and into date set

Press ADJ to increase

Press SET button to  
confirm and into month set

Press ADJ to increase

Press SET button to  
confirm and into date setPress ADJ to increase and  
MODE to finishPress ADJ to increase and  
MODE to finish**Maximum and minimum record and clear**

In time mode, press ADJ, the screen display MAX icon, then temperature and humidity is the maximum value

Press ADJ again, the screen display MIN icon, then the temperature and humidity is the minimum value

Press ADJ again, return to time mode

When MAX or MIN icon display on screen, hold ADJ for 2 seconds, then to clear the memory

**Snooze**

When the alarm starts, press SNOOZE or no press any button, the snooze function will open and repeat four times